 


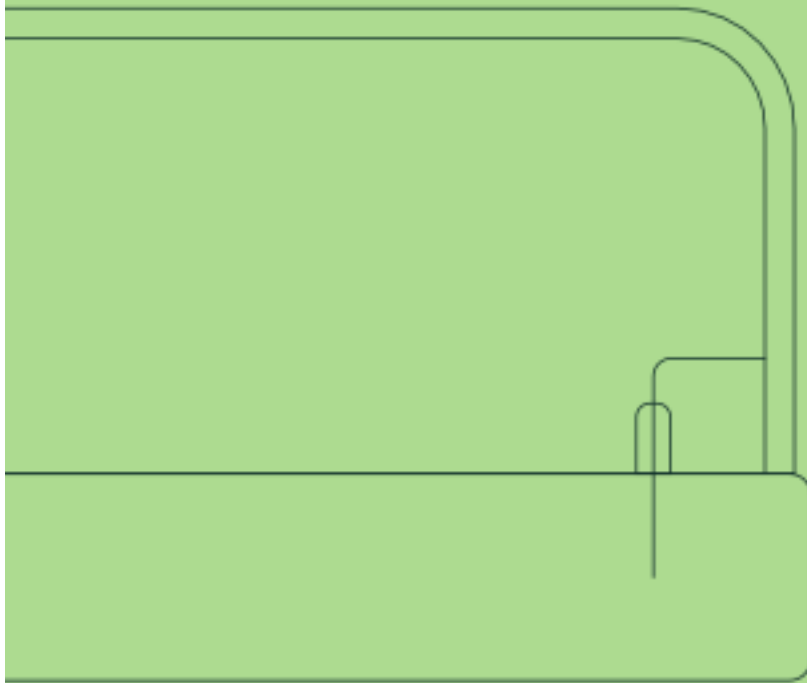

The SmallGarden

Setup Guide



support@edntech.com ✉ [@edngarden](https://www.instagram.com/edngarden) 📷



Lets Start Growing Together

Welcome to the SmallGarden.

The SmallGarden is a smart indoor garden designed to give you an instant green thumb.

Now you can grow herbs, vegetables, and flowers easily, indoors. Your smart garden will supply the right amount of light and water to keep your plants happy and healthy. Paired seamlessly with our app, your garden will monitor water levels, track plant growth, and guide you through growing to ensure your gardening success.



What's In The Box?



SmallGarden



 
10x SeedPods



PodTray




10x Cups

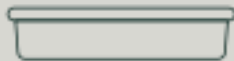

Water Reservoir



10x Cup Lids

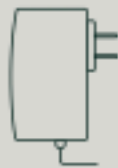

Power Supply



Easy Setup

The SmallGarden is completely controlled by your phone. Once activated, you will be able to set your SmallGarden's light schedule, track plant growth, view water levels, and more!

1. Plug in your SmallGarden and place on a clean, level surface.
2. Use your smartphone camera to hover over the QR code and download the ēdn app.
3. Create your account and check for a flashing green light on the side of your SmallGarden. If the light isn't flashing green, hold the button for 3 seconds to initiate Setup Mode.
4. In your ēdn app, select 'Add Garden' and follow the tutorial to connect your garden to Wi-Fi to start growing!



edntech.com/pages/app

*2.4GHz Wi-Fi is required to operate the SmallGarden.



Operation

Button Press



Turn light ON/OFF 1x



Enter Setup Mode 3s
(Press and hold)



Add water to the garden's side inlet





What's a SeedPod?

Inspired by NASA technology, our SeedPods make growing incredibly easy. Each SeedPod is thoughtfully designed with seeds and time-released plant food already inside, providing your plants with the optimal amount of nutrients throughout their life cycle.

SeedPods are completely biodegradable, non-GMO, pesticide and herbicide-free, and can even be transplanted outside for future plant growth.





How to Plant Your SeedPods

1. Remove all cups from your SmallGarden.
2. Carefully remove the lids from the cups.
3. Gently place the SeedPods into each cup and attach the lids.
4. Place the cups back into your SmallGarden with the lid cutouts facing inwards.
5. Add 1400ml of water to the garden's side inlet until full. You can monitor the changing water levels in your app at any time.
6. Scan the QR code on your SeedPod packs to instantly add your plants to the app, where you can receive guidance on how and when to care for your plants.





Safety Information

This legal guide and user manual include the safety, operating, handling, disposal, and cleaning instructions for the EDN, Inc. ("edn") SmallGarden models identified above (the "garden"). edn reserves the right to modify these instructions at any time; for the latest copy, please visit <https://www.edntech.com>.

Read all safety and operating instructions before assembling or using the garden. Failure to follow instructions could result in harm.

User Maintenance

1. Do not service or repair the product yourself. Refer all questions to support at support@jedntech.com. Retain these instructions for future use and reference. Any changes or modifications not expressly approved in this manual could void your authority to operate this garden.
2. Any servicing must be performed by an authorized service representative. Use original packaging for storage when the appliance is not used.
3. The garden is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Periodically examine the product for damage or defects to the plug, cord, lights, water meter, and other parts. Never use a damaged product as misuse could cause harm.
5. To clean the garden, do not use rubbing alcohol or denatured alcohol as this can damage the product surface. Use warm water with mild detergent if necessary. Be sure to allow parts to dry completely before use.

Operation

1. Ensure that the area around the garden is dry before plugging in and operating it. Failure to do so could result in electric shock.
2. Do not use the garden with attachments or other seed pods not made by edn.
3. Keep power cord away from water, heated surfaces, moving objects, and other hazards.
4. Keep air openings free of lint, hair, and the like.
5. Do not touch the lights unless the power has been disconnected and you have waited a few minutes for the LEDs to cool.
6. Do not use the garden for anything other than its intended purpose. Unapproved uses may void warranty.
7. Indoor, household use only. The garden is not designed to be used outdoors or in a commercial application.
8. Adult use only. This garden is not suitable for children. Children should be supervised to ensure they do not play with the garden.

CAUTION:

Garden lights may be hot while in use and after use for a period of time. Use caution when lifting or moving the garden after it has been in use. Do not look directly into the light source. Do not cover the garden while in use as this could cause heat to build up and cause a fire. Unplug the garden before cleaning, replacing seed pods, assembly, or disassembly.

Electrical Information

CAUTION: To prevent electric shock, ensure that the power adapter is completely inserted into the electrical outlet. **DO NOT SUBMERGE OR IMMERSE CORD IN WATER OR OTHER LIQUID.**

The garden works with the supplied AC/DC adapter operating at 12VDC and 2A. Use only the supplied AC/DC adapter with the garden.

Do not use the supplied AC/DC adapter with any device other than the garden. If the cord is damaged in any way, discontinue use of the garden and contact edn support at support@edntech.com.

This garden contains materials that are hazardous to the environment if discarded in your general waste. For further information on disposing of your garden, contact your local solid waste authority.

Warranty

30-Day Unopened Warranty

If you are unsatisfied with the purchase of your garden, you may return it during the 30-day period following the date of shipment. If the garden is returned unopened, unused, undamaged, and in the original packaging in accordance with this policy, we will offer a refund of the purchase price paid, which refund will be made by crediting the account used to make the original purchase. For more information, please visit: <https://www.edntech.com/pages/returns-and-warranty>.

1-Year Limited Warranty

edn offers a one-year limited warranty covering defects in materials or workmanship on the garden, subject to the exceptions below. The warranty runs for one year from the date of shipment of your garden to you. The warranty does NOT apply to issues of: normal wear and tear; your failure to adhere to operating instructions; gardens missing serial numbers; damage caused by your negligent, accidental, improper, or careless use; damage by outside forces beyond edn's control; your loss of parts; or modifications or repairs done by anyone other than edn. This warranty excludes all incidental or consequential damages. ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS WARRANTY. EXCEPT FOR THE LIMITED EXPRESS WARRANTIES SET FORTH ABOVE, edn DISCLAIMS ALL OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS.

If your garden fits the above warranty and is returned as specified below, edn will repair or replace the garden, at its sole option. Repair or replacement will be your only remedies under this limited warranty. For more information, please visit: <https://www.edntech.com/pages/returns-and-warranty>.

Obtaining Warranty Service

You can obtain a return authorization by contacting support@edhtech.com. DO NOT RETURN THE GARDEN WITHOUT FIRST OBTAINING A RETURN AUTHORIZATION. Unauthorized returns will be refused.

Shipping and handling charges, gift wrap fees, and taxes paid (e.g., state, customs, VAT) are not refundable. You are responsible for and must prepay all shipping charges. You assume all risk of loss or damage to the garden while in transit to edn.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

FCC Information

Contains Transmitter Module FCC ID: 2AC7Z-ESP32WROOM32E
Transmit Frequency: Wi-Fi (2402MHz – 2480MHz) 802.11 b/g/n; Bluetooth (2402MHz – 2480MHz)
Maximum RF Output Power: Wi-Fi 19.68 dBm; Bluetooth 8.23 dBm

IMPORTANT!

Any changes or modifications not expressly approved by edn could void the user's authority to operate this equipment.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged

- to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with radiation exposure limits set forth for an uncontrolled mobile environment. The antenna used for this transmitter must be positioned to provide a separation distance of at least 20 cm from all persons. The antenna must not be operating in conjunction with any other antenna or transmitter.

Proposition 65 Warning

 **WARNING:** This product can expose you to chemicals known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

Trademarks

Apple®, HomeKit®, App Store®, and iPhone® are registered trademarks of Apple Inc. registered in the U.S. and other countries. The trademark "iPhone" is used with a license from Alphone K.K. Other trademarks and trade names are those of their respective owners.

Works with Apple

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

HomeKit

To control this HomeKit-enabled accessory, the latest version of iOS or iPadOS is recommended.

Home Hub

A customer who owns an Apple TV (4th generation or later) with tvOS 10 or later, an iPad with iOS 10 or later, or a HomePod can control HomeKit-enabled accessories away from home and automatically through triggers such as time of day, location, sensor detection, or the action of an accessory.



Maintenance + Care

We recommend cleaning your SmallGarden each time prior to planting new SeedPods.

Clean the garden by wiping down the wood and aluminum with soap and water.

The SeedPod cups, PodTray, and reservoir are dishwasher safe and can also be hand washed using soap and warm water.